



HEADBOARD ASSEMBLY INSTRUCTIONS

HARDWARE ACCESSORY

Headboard Mount: 2

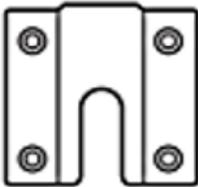


Wallboard Mount: 2

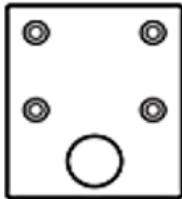

Flat Wash: 20



Mounting Modification Plate: 2

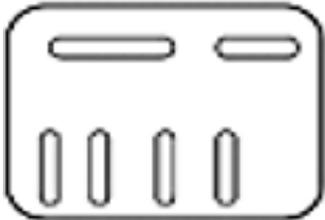

Hex Key: 1




Hexagon Screw(35mm): 10





Hexagon Screw(20mm): 10



Screw: 8





Screw:8 + Drywall anchor: 8




Step#1 Secure Legs to Headboard

Attach the headboard Legs by using the provided Hex Key, 4-10 pcs Hexagon screws and 4-10 pcs Flat washers. Secure both Legs to the headboard at

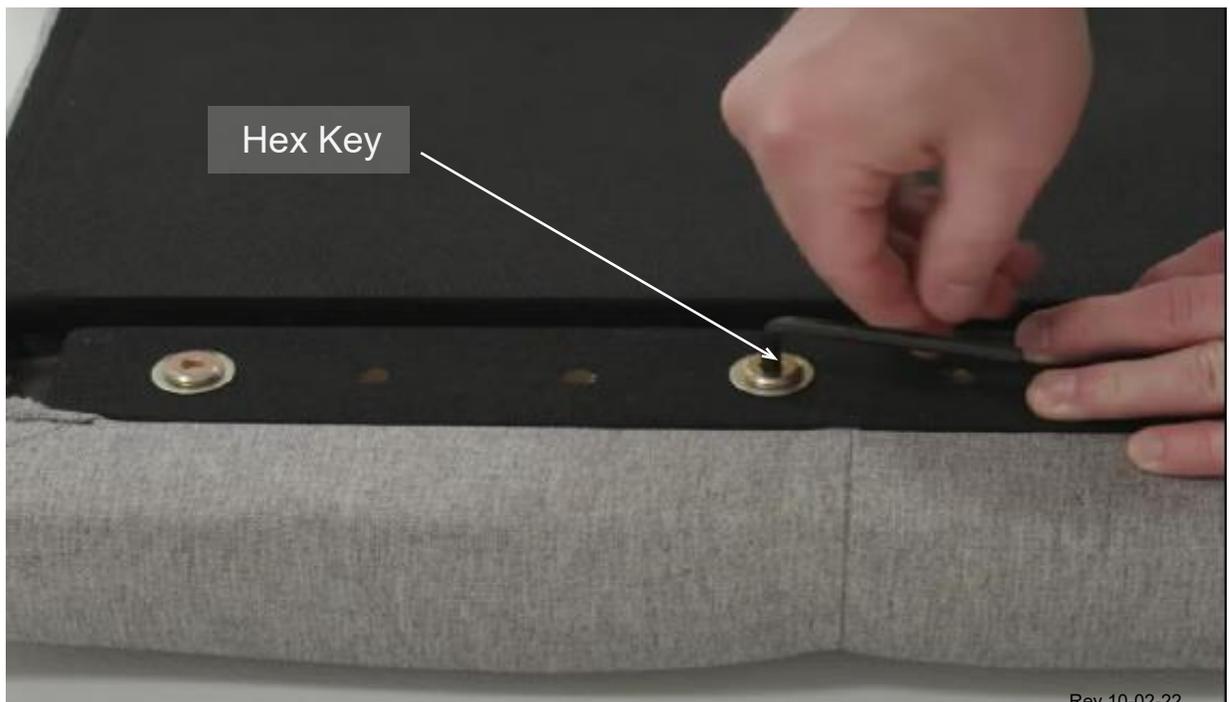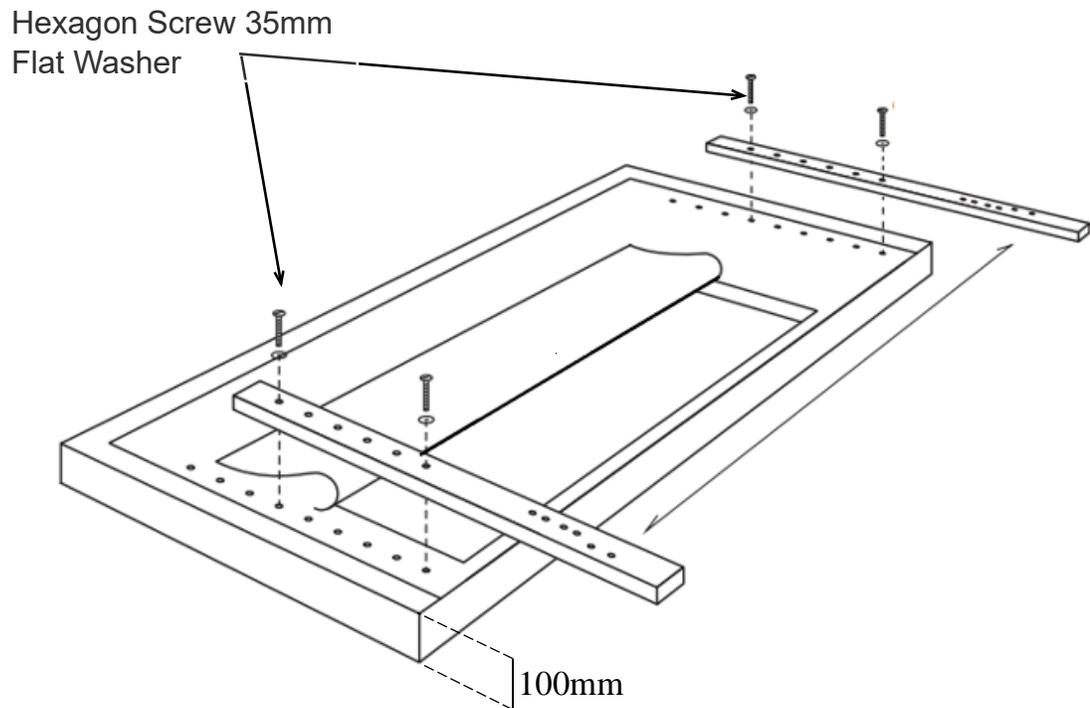

Step#2–Secure Headboard Mount and Wall Mount (- Optional)

Using the Mounting Blocks inside the headboard. Mounts to the top of the headboard with the provided 8 pcs Screws. Then attach the Wall Mounts to the wall using the Drywall Anchors and the remaining 8 pcs Screws at the desired height.

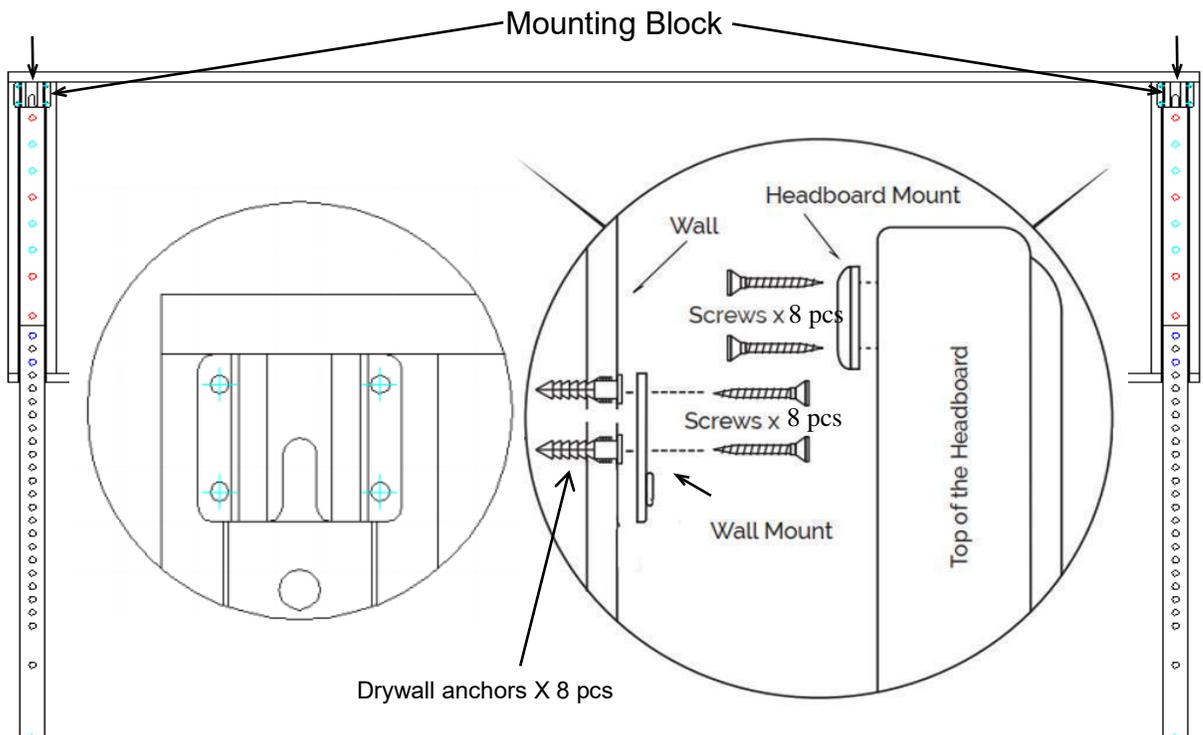

If the bed frame DOESN'T fit the headboard, use the provided Mounting Modification Plates to secure the bed frame to the headboard.

(Examples - Queen size headboard to fit to a Full-size bed frame OR a King size headboard to fit a Cal King bed frame.)

Position the Mounting Modification Plate to determine which slots will line up with the Headboard Brackets and headboard. Use provided 8 pcs Hexagon Screw and 8pcs Flat Washer to attach.

